

Channels

Highlight the channel abbreviation to get the channel description.

TV Window

Watch your program while using the Guide.

Timeline

To see what's on later, navigate forward with the **RIGHT ARROW**. Use the **LEFT ARROW** to go back.

Advance Timeline

Press **FFWD** or the **GREEN** button to advance 12 hours. Press **RWD** or the **RED** button to go back 12 hours.

**Highlight Bar**

Use the **ARROW** buttons to highlight a program and view its description. To tune to a highlighted program, press **SELECT**.

Search & Guide Options

Press **DASH** to Search, **0** or **YELLOW** button to sort programming by category, move to a specific date and time, change your Favorites list and see Pay Per View titles.

Customize Your Guide

Quickly get to your favorite channel right away, or discover something new.

- › Press the **GUIDE** button twice to search by category.
- › Scroll through the options, then press **SELECT** to view a category.



QuickTune

Instantly access nine of your favorite, most-watched channels so you can tune to them right away.

- › To add a favorite channel, press **ENTER** or the **GREEN** button to add the channel.
- › To access your QuickTune favorites at any time, press the **UP ARROW** on your remote.



One-Line On-Screen Guide

See what's coming up without missing what's on. View the One-Line On-Screen Guide while viewing your program on the full screen.

- › Press **ENTER** or the **BLUE** button on your remote.
- › Scroll through the Guide one line at a time.
- › Press **EXIT** to close the Guide.



Smart Search

Spend less time searching and more time watching with our intuitive search feature.

- › Press **DASH** or **MENU** on your remote.
- › Choose **SEARCH**.
- › Search by title, person, channel or keyword.

Scroll through the channel options until you find the one you're looking for, then press **SELECT**.



Need to limit or block programming? Press the **MENU** button and then select **SETTINGS**, and **PARENTAL** or **CONTENT CONTROLS**.

SPORTSMIX® Channel¹

Watch up to eight different sporting events, highlights and analysis from popular sports networks at the same time, all in HD!

- > Tune to Ch. 205 SPORTSMIX®.
- > Use the ARROW buttons to highlight a channel and to hear audio for that channel. Press SELECT to tune directly to that specific channel.

For full Mix Channels and interactive functionality, HD equipment model H/HR 21 or later is required.

**SCOREGUIDE™**

Get sports scores and the latest stats instantly, without changing the channel or missing a big play.

- > Press the **RED** button when watching any sports channel.



When a game is blacked out, set your receiver to automatically search for it on another channel. The GameSearch™ setting defaults to Off. To use this feature, change setting to On.

- > Press **MENU** on your remote.
- > Select **SETTINGS**.
- > Right arrow to **GAMESEARCH** and select.
- > Arrow up and select **GAMESEARCH ON**.

Available on H25, H26K & H44 HD Receivers.